USER MANUAL

MODEL: DS-306A

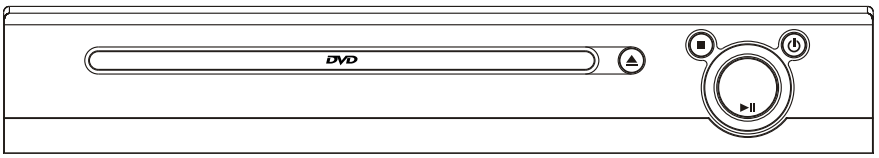

Please read all warnings and instructions carefully before operating this unit.

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

TABLE OF CONTENTS

SAFETY PRECAUTIONS ---- 01-02

IMPORTANT SAFETY INSTRUCTIONS ---- 03

NOTICE ---- 04

PLAYABLE DISCS ---- 05

PANEL ---- 06

BASIC CONNECTION ---- 06-07

ACCESSORIES and REMOTE CONTROL ---- 08

BASIC PLAYBACK ---- 09

ADVANCED PLAYBACK ---- 10-11

SPECIAL FUNCTION PLAYBACK ---- 11

SYSTEM SETUP ---- 12-14

TROUBLE SHOOTING ---- 15

SPECIFICATIONS ---- 16

CONTACT DETAILS ---- 17

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage " within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The symbol for CLASS II (Double Insulation).

WARNING: **TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE, DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET, REFER SERVICING TO QUALIFIED PERSONNEL ONLY.**

The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.

CAUTION: When replace the direct plug in power supply or a separable, cord-connected power supply, the replacement must be exact duplicate, or one recommended by the manufacturer.

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

This product utilizes a laser.
Use of controls or adjustments or performance of procedures other than those specified here in may result in hazardous radiation exposure.
Do not open the cover and do not repair yourself. Refer servicing to qualified personnel.

DANGER: Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

This product incorporates copyright protection technology that is protected by method claims of certain U. S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.
Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture.
In case of 525 or 625 progressive scan picture problems, it is recommended that the user switch the connection to the "standard definition" output. If there are questions regarding our TV set compatibility with this model 525p and 625p DVD player, please contact our customer service centre.

Manufactured under license from Dolby Laboratories. " Dolby " and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992-1997 Dolby Laboratories. All rights reserved.

Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

DO NOT REMOVE THE CABINET COVER OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

1.Read these manuals
After unpacking this product. read the manual carefully. Follow all the operating and other instructions.

2.Ventilation
Slots and openings in the cabinet are provided for ventilation and to ensure operation of the product. These protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product a Bed, sofa, rug or other.

3.Heat
The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

4.Water and Moisture
Do not use this product near water for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

5.Cleaning
Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

6.Power-cord protection
Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

7.Lightning
For added protection for this product during storm, or when it is left unattended and unused for long periods of time, unplug it from the wall out let. This will prevent damage to the product due to lightning and power-line surges.

8.Object and Liquid entry
Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

9.Attachments
Do not use attachments not recommended by the product manufacturer as they may cause hazards.

10.Accessories
Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

11.Disc tray
Keep your fingers well clear of the disc tray as it is closing. Neglecting to may cause serious personal injury and damage to the product.

12.Burden
Do not place a heavy object on or step on the product. The object may fall causing serious personal injury and serious damage to the product.

13.Damage Requiring Service
Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
a) When the power-supply cord or plug is damaged.
b) If liquid has been spilled, or objects have fallen into the product.
c) If the product has been exposed to rain or water.
d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
e) If the product has been dropped or damaged in any way.
f) When the product exhibits a distinct change in performance - this indicates a need for service.

14. Servicing
Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

15. Replacement Parts
When replacement parts are required ,be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

16.Safety Check
Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

17.Other
Cutting the power only when plug of apparatus is pulled out, so please make sure the plug can be pulled out from the socket easily.

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

NOTES ON HANDLING

- The top and rear panels of the unit may become warm after a long period of use. This is not a malfunction.
- When the unit is not use, be sure to remove the disc and turn off the power.
- If you do not use the unit for a long period, the unit may not function properly in the future. Turn on and use the unit occasionally.
- Do not place foreign objects on the tray.

LOCATION

Do not locate the unit in places such as:

- Near heating devices or in enclosed car.
- High temperature (40° C or higher) or high humidity (90% or higher).
- Dirty places.
- Avoid direct exposure to sunshine

DISTURBANCE

When you place this unit near a TV, radio or VCR, the playback picture may become poor and the sound may be distorted. In this case, place the unit away from the TV, radio or VCR.

NOTES ON MOISTURE CONDENSATION

The pickup may be condensed with water under the following situation.

- When you bring the unit directly from a cold place to a warm place.
- When you use the unit in a room where you just turned on the heater, or a place where the cold air from the air conditioner directly hits the unit.
- During the summer, when you use the unit in a hot and humid place just after you move the unit from an air conditioned room.
- The room is vaporous or damp.

If condensation exists, the unit will not operate properly. Remove the disc, connect the power cord of the unit to the wall outlet, turn on the unit, and leave it for two or three hours. After two or three hours, the unit will have warmed up and evaporated any moisture. Keep the unit connected to the wall outlet and moisture condensation will seldom occur.





ON HANDLING DISCS

- Do not touch the playback side of the disc.
- Do not attach paper or tape to disc.

ON CLEANING DISCS

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.



- If you can not wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzine, commercially available cleaners or antistatic spray for vinyl Lps. It may damage the disc.

ON STORING DISCS

- Do not store discs in a place subject to direct sunlight or near heat source.
- Do not store discs in place subject to moisture and dust such as a bathroom or near a humidifier.
- Store discs vertically in a case. Stacking or placing object on discs outside or their case may cause warping.

STRUCTURE OF DISC CONTENTS

Normally, DVD discs are divided into titles, and the titles are sub-divided into chapters. Audio CD are divided into tracks.

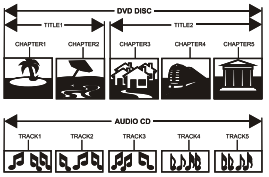

Each title, chapter, or track is assigned a number, which is called title number, chapter number or track number respectively.
There may be discs that do not have these number.

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

Getting Started

Disc types

DVD VIDEO	Audio & Video	Disc size 12cm single side, single layer / single side, double layer PAL and NTSC DVD disc Playback time 135min / 240min max.
COMPACT disc DIGITAL AUDIO	Audio	Disc size 12cm / 8cm CD disc Playback time 74min/20min max.
JPEG	Picture	JPG format disc

* Player is DVD-Video, DVD+/-R, DVD+/-RW, CD-DA, CD-R, CD-RW compatible.

Region Management Information

This DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD Player, this DVD player cannot play that disc.

This Region number of this DVD player is

.

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

FRONT PANEL

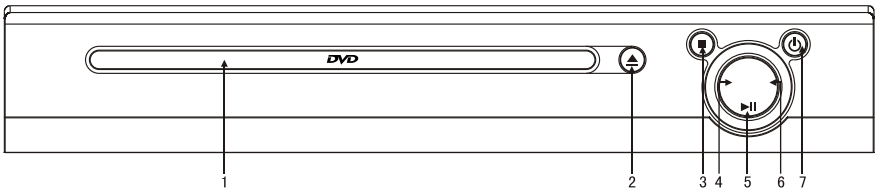

1. TRAY
2. OPEN/CLOSE
3. STOP
4. REMOTE CONTROL SENSOR
5. PLAY/PAUSE
6. POWER INDICATOR
7. STANDBY/ON

REAR PANEL OUTPUT

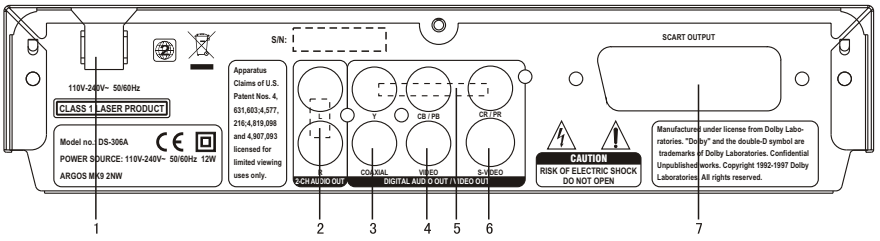

1. POWER LINE INPUT
2. 2 CHANNELS AUDIO OUTPUT
3. COAXIAL OUTPUT
4. VIDEO OUTPUT
5. Y, CB/PB, CR/PR OUTPUT
6. S-VIDEO OUTPUT
7. SCART OUTPUT

BASIC CONNECTION

● **Connecting to a TV with Scart cable**

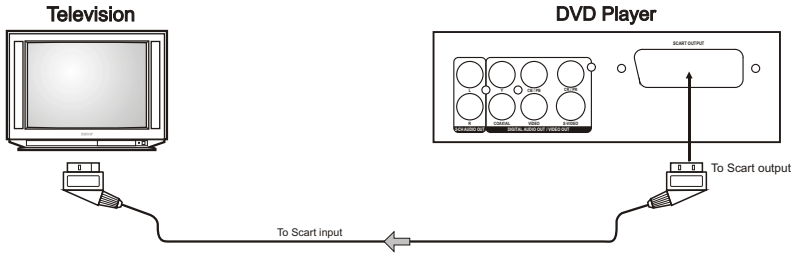

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

● Connecting to a TV with Audio/Video cable

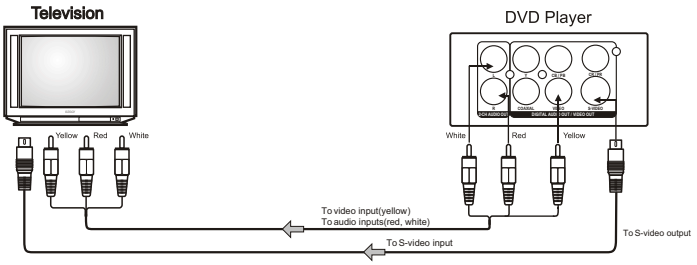

If the TV has a S-video input, connect the DVD player with a S-video cable.
When using a S-video cable, do not connect the yellow video cable.

● Connecting to a audio system and TV equipped with YUV video input

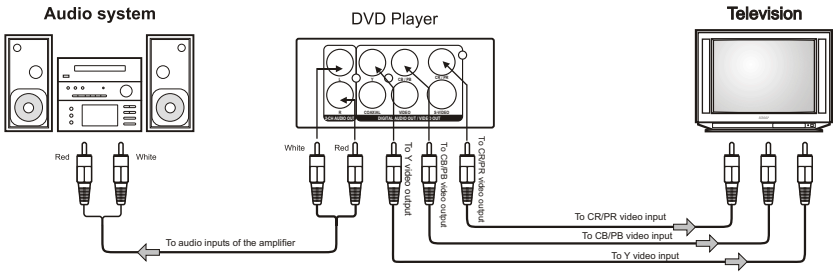

● Connecting to an amplifier equipped with a digital audio input and TV

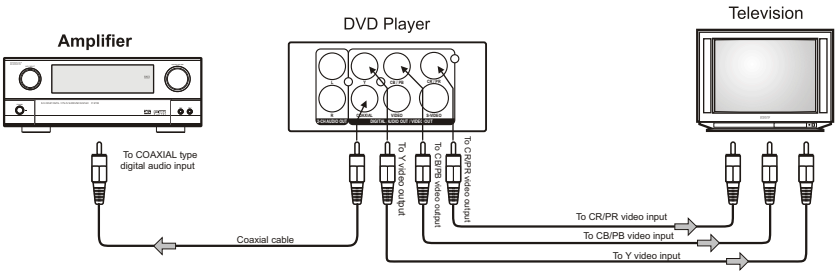

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

REMOTE CONTROL

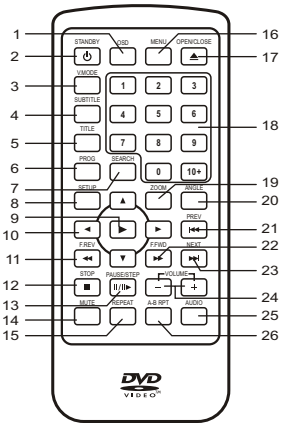

Function	Function
1. OSD(On Screen Display)	14. MUTE
2. STANDBY/ON	15. REPEAT
3. V.MODE	16. MENU
4. SUBTITLE	17. OPEN/CLOSE
5. TITLE	18. DIGITS AND 10+ BUTTONS
6. PROGRAM	19. ZOOM
7. SEARCH	20. ANGLE
8. SETUP	21. PREVIOUS
9. ENTER/PLAY	22. FAST FORWARD
10. CURSOR → LEFT UP RIGHT DOWN	23. NEXT
11. FAST REVERSE	24. VOLUME+/-(Volume control)
12. STOP	25. AUDIO
13. PAUSE/STEP	26. A-B REPEAT

Loading Battery

1. Open the cover.
2. Insert battery.
   Make sure to match the + and - on the battery to the marks inside the battery compartment.
3. Close the cover.

Notes on battery

- Pls take out the insulated plastic piece,when you use the remote first time.
- Do not insert battery into the remote control in the wrong direction.
- Do not charge, heat, open, or short-circuit the battery. Do not throw battery into a fire.
- If the remote control does not function correctly or if the operating range becomes reduced, replace all battery with new ones.
- Improper replacement of battery may result in explosive hazard. It will be replaced only by battery with the same or equivalent type.

ACCESSORIES

- **Audio/Video cable 1**
- **Remote control 1**
- **User manual 1**

Audio/Video cable



User manual



Remote control

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

Preparations

- When you want to view a disc, turn on the TV and select the video input connected to the DVD player.

Basic playback

1. Press STANDBY/ON in the front panel, the DVD player turns on and the TV screen will display the start logo. If a disc is already in the tray, it will begin to play automatically.
   Note: Power indicator light will be red color under standby, it has no display under other status.
2. Press OPEN/CLOSE ⏏ to open the disc tray, place a disc on the disc tray.
   - There are two different disc sizes. Place the disc in the correct guide on the disc tray. If the disc is out of the guide, it may damage the disc and cause the DVD player to malfunction.
   - Do not place a disc which is unplayable in this DVD player.
3. Press OPEN/CLOSE to close the disc tray, the playback will automatically start.
   - Some discs may not playback automatically, you can press ENTER/PLAY button to start playback.
4. Some discs may start playback with a menu, use the cursor button on the remote control to select menu options and press ENTER/PLAY to start, or press digits to select a menu options directly.

Stop playback

1. Press STOP ■ button to go to stop mode, the TV screen will show the start logo. As some disc the player can recall the location where stopped, such as DVD.
2. Press ENTER/PLAY to playback to resume play--back from the location where playback is stopped or from the beginning of the disc.
3. Press STOP twice to stop completely.

Fast forward and Fast reverse

1. Press F.FWD ▶▶ to fast forward through the disc. Each time the F.FWD ▶▶ button is pressed, the fast forward motion speed changes.
2. Press ENTER/PLAY to resume normal playback.
3. Press F.REV ◀◀ to fast reverse through the disc. Each time the F.REV ◀◀ button is pressed, the fast reverse motion speed changes.
4. Press ENTER/PLAY to resume normal playback.

Previous and Next

During playing, press PREV ⏮ key can back to start of the chapter, then each press this key will skip a chapter still the start of the disc.
Each press of NEXT ⏭ key during playing will skip the current chapter and play the next one.

Pause/Step playback

1. Press PAUSE/STEP ⏯ first time to pause playback (still mode). The sound will be muted during still mode.
2. Press PAUSE/STEP ⏯ continuous to single step forward to the next frame in the video.
3. Press ENTER/PLAY to resume normal playback.

NOTES:

1. "⊘"may appear on the TV screen during operation. A "⊘" means that the operation is not permitted by the unit or the disc.

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

IMPORTANT NOTE:
THE FOLLOWING FUNCTIONS ARE APPLICABLE ONLY TO DVD DISCS. IF OTHER DISC FORMATS ARE PLAYED, SCREEN DISPLAY AND OPERATION WILL BE DIFFERENT.

OSD

Press this button and the screen will display some information about disc, such as : " Title Elapsed " , " Title Remain ", " Chapter Elapsed ", " Chapter Remain " and " Display Off ".

MENU

Press this button and the screen will display " Root Menu ", select item according to your preference. (This key is valid to DVD disc possessing multi-layer menu.)

V.MODE

This button can set VIDEO output among "CVBS", "YUV" , "P-Scan" or "RGB" .
Note: The screen disappear when press this button, press this button continuously until the screen turn normal.If there are picture interferences or no picture, please press "V.MODE" to correct it.

SUBTITLE

Press this button and the screen will display "SUBTITLE 01/XX XXXXX", "01" indicates the ordinal number of this language; "XX" indicates total number of language; "XXXXXX" indicates the language of country. (the number of language depends on disc).

TITLE

According to some DVD discs, press this button will display "Title Menu", the unit will play from the disc head or you can use digits to select tracks preferred.

PROGRAM

Press this button and the screen will display info window , press digits button to input the program number what you want, when finished, move the cursor to select the " Start " logo, at this time the unit will start program playback and the screen will display "Program" logo.
If you want to cancel this function, press " STOP " twice and then press "ENTER/PLAY" .

SEARCH

Press this button and the screen display menu, then press digits button into menu, for example:

first	Title 02/10 Chapter /32
twice	Title 02/10 Time : :
third	Chapter 01/32 Time : :

According to operation, you could choose point that you want to play.

ZOOM

Each time pressed, the picture enlarges.
In this mode, you can move the picture with CURSOR button.

ANGLE

For discs with this feature, press this key to view action from different angles.(Depending on the DVD)

VOLUME and MUTE

Press " + " at the right of VOLUME to increase volume, " - " to decrease to volume. The first press of MUTE will display MUTE (no voice), the second press will return to normal playback.

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

REPEAT

Follow this operation :

first ↻ Chapter
twice ↻ Title
third ↻ All

the fourth pressed will cancel repeat.

A-B REPEAT

Press " A-B RPT " to begin start-point, press again to set an end point and complete setting. The selected section A-B will be repeated. The third press will cancel this function.

AUDIO CHANNEL CHOOSE

Press this button on remote control to change the mode of audio.

For example: Audio 1/2: AC 3 2 CH English
Audio 2/2: AC 3 5.1 CH English

Note: When press this button continuously, you must above 3 seconds interval.

AUDIO CD PLAYBACK

When playing Audio CD disc, a navigation menu will be displayed automatically if the disc is loaded in succession.
In the menu, use UP or DOWN button in the cursors to select the file, then press "ENTER/PLAY" to play this file. In this page, press PREV or NEXT can go to the previous or next page.

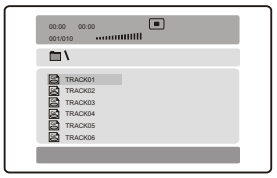

JPEG DISC PLAYBACK

When playing JPEG disc, a navigation menu will be displayed automatically if the disc is loaded in succession. In the menu, use UP or DOWN in the cursor to select a file, then press "ENTER/PLAY", the file will be play with a slide - show. Press PREV or NEXT to select the previous or the next picture. Press PAUSE to pause the current picture for enjoying, when press "ENTER/PLAY" , it will return to normal playing.

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

- When you press **SETUP** key on the remote control, the setup menu will be displayed.
  1.Within the setup menu, you can use UP, DOWN, LEFT and RIGHT buttons on the remote control to move the cursor, and then press the ENTER/PLAY button to make your selection. Press LEFT can return the previous menu.
  2.To exit setup menu, you can press SETUP menu.

1. GENERAL SETUP PAGE

Setup TV screen format, video type and all DVD functions.

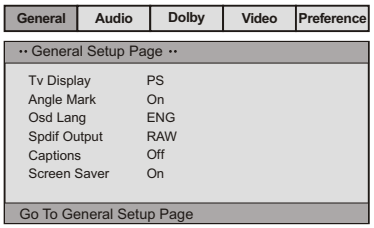

1.1 TV DISPLAY

The TV Display which select the different ratio of display format and the screen of TV, There are various types of display on screen for different matches between Disc and TV .

Note:

- No matter which display format is selected, a picture recorded in standard 4:3 format always displays in the 4:3 aspect ratio.
- The display format of DVD titles may vary; please refer to the information that accompanies your specific DVD title.
- If the DVD title is recorded in 16:9 wide display format while the TV is a standard 4:3 screen, horizontal compression of the image will result.
- Some DVD titles may be recorded in special formats. In such cases, the DVD titles will always appear on the screen in their original format, regardless of which TV display format you select.

1.2 ANGLE MARK

ANGLE MARK: Users can select a particular camera angle when playing a DVD that offers multiple angles.

1.3 OSD LANG

On Screen Display (OSD) Language: Users can select the whole setup menu and on-screen display language.

1.4 SPDIF OUTPUT

SPDIF OUTPUT MODE: Sets the audio outputs. Under the status of SPDIF/RAM , can not adjust volume of DVD, CD.

SPDIF the abb reviation of " Sony Philips Digital Interface Format " .

This DVD player includes three kinds of audio output:

1. **SPDIF OFF:** An analog surround sound format is output through the back-panel connections for L, R.
2. **SPDIF/RAW or SPDIF/PCM:** This surround sound format is output to a Dolby Digital decoder through the coaxial connectors on the back panel of the product.

1.5 CAPTIONS

CAPTIONS: For hearing-impaired people. The program can be displayed with recorded explanatory captions.
Note: This is valid for a disc that has captions.

1.6 SCREEN SAVER

SCREEN SAVER: If the screen saver is on,then there will be an animated picture on the screen whenever the DVD player is idle for a certain time.

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

2. AUDIO SETUP PAGE

2.1 DOWNMIX SETUP

DOWNMIX MODE: Sets front speakers to LT/RT STEREO.

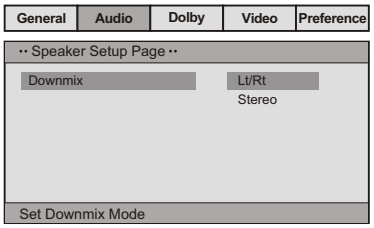

3. DOLBY DIGITAL SETUP PAGE

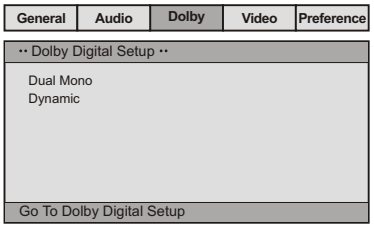

3.1 DUAL MONO

DUAL MONO: If your amplifier / decoder has Dolby Digital output, you may select stereo, left mono, right mono, or mixed mono mode for your amplifier decoder.

3.2 DYNAMIC

DYNAMIC: This function is generally used when playing high volume programs at night, in order to minimize disturbances . This setting can dynamically lower the volume and still keep the original tone quality. This is the range, measured in decibels(dB), between the loudest and the quietest sound registers in a soundtrack.

4. VIDEO SETUP PAGE

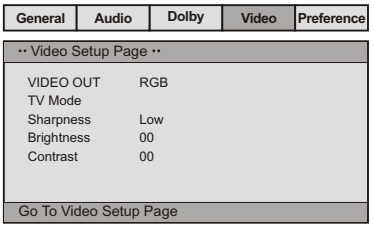

4.1 VIDEO OUT

VIDEO OUT: Sets the video output.

4.2 TV MODE SETUP PAGE

TV MODE: Sets the scan mode to same of your TV. If there are picture interferences or no picture, please press "V.MODE" to correct it.
(The VIDEO OUT option must select "YUV", the TV MODE option is valid.)

4.3 SHARPNESS

SHARPNESS: Sets the sharpness level of video output.

4.4 BRIGHTNESS

BRIGHTNESS: Sets the brightness level of video output.
Press right button the TV will display below.
Press LEFT/RIGHT button to adjust, then press ENTER/PLAY button to confirm and return upon menu.

4.5 CONTRAST

CONTRAST: Sets the contrast level of video output.
Press right button the TV will display below.
Press LEFT/RIGHT button to adjust, then press ENTER/PLAY button to confirm and return upon menu.

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

5. PREFERENCE SETUP PAGE

The preference setting is only active with no disc, and the setting is effective on each time power on till exchanging the saved setting.

5.1 TV TYPE

TV TYPE: This player supports different TV output, including Auto, NTSC, and PAL systems.

- If your TV support only NTSC or PAL and you have inadvertently selected the wrong TV type, the TV image will flicker and become black-and-white. In this case, you should press the SETUP button to set as following **Note**.

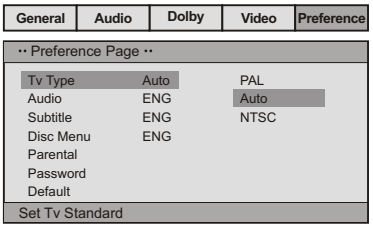

Note: How to Set the TV Type?

- You may switch the NTSC/PAL setting of the DVD player to match the video signal of your TV.
- The table below shows what kinds of disc are compatible with each setting (Auto, PAL and NTSC)

Disc		Output Format		
Type	Format	Selected TV System Mode		
		NTSC	PAL	Auto
DVD	NTSC	NTSC	PAL	NTSC
	PAL	-----	PAL	PAL

5.2 AUDIO

AUDIO: Sets the preferred audio language as the default when playing DVD. (If the DVD supports the languages)

5.3 SUBTITLE

SUBTITLE: Sets the preferred subtitle language as the default when playing DVD.(If the DVD supports the languages)

5.4 DISC MENU

DISC MENU: Sets the preferred menu language as the default when playing DVD. (If the DVD supporst the languages)

5.5 PARENTAL

PARENTAL: The parental control function works in conjunction with the different censorship classes assigned to DVDs. These classes help to control the types of DVDs that the family watches, There are up to 8 censorship classes for DVDs.

Note: If you change this set, you must input password. (Initial password : 136900)

5.6 PASSWORD MODE

PASSWORD CHANGE: You can change the password, please type 6 numerals as new password.

Note: (Initial password : 136900)

Be sure remember new password. When set parental control function you must input new password .

5.7 DEFAULT

DEFAULT: Resets to all the manufacturer's original settings for this DVD player Press ENTER/PLAY to perform the reset.

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

Please check the following guide for the possible cause and solution for a problem before contacting the nearest service center or dealer for repairs.

SYMPTOMS AND CORRECTIONS

SYMPTOMS	CORRECTIONS
No power	Check to make sure that the power connection is secure.
No picture	Make sure the connection between the player and the TV is secure.
	Make sure that the TV is in good working condition.
	Please press "V.MODE" button continuously until the picture returns to normal.
No sound	Make sure the connection between the player and other devices are secure.
	Make sure that the TV and AMP are in good working condition and setup properly.
Failed to Play	Check that the disc is properly inserted.
	Clean the disc.
Failed to respond to remote control	Remove obstacles between remote control and unit.
	Aim remote control at the sensor on the front panel.
	Check batteries and replace them if necessary.
Picture Disturbance	Check the disc for dirt and scratches. Clean or replace disc.
	Shut down the unit, wait ten seconds, and restart the unit.
Failed to work with keys	Power surges or other electrical phenomena. Shut down the unit, wait ten seconds, and restart the unit.

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

System and Outputs

VF Signal system	NTSC/PAL
Frequence response	CD: 20Hz-20KHz(EIAJ) DVD: 20Hz-44KHz(96KHz)(Sample result) 20Hz-22KHz(48KHz)(Sample result)
Audio S/N ratio	> 85 dB
Audio	MPEG LAYER2 standard
Audio output (analog audio)	Electric level output: 1.8 ± 0.2V Resistance: 10K
Audio output (digital audio)	Electric level output: 0.5Vp--p Resistance: 75
Video output	Electric level output: (1.0±0.2)Vp--p Resistance: 75 Unbalanced negative
S-Video output	Electric level output: Brightness(Y)1.0Vp--p, Resistance: 75 Chrominance (C): 0.286Vp--p, Resistance: 75
Component video (Y, CB,CR)	Electric level output: 0.7Vp--p, resistance: 75

General

Power	110V-240V~ 50/60Hz
Power consumption	12W
Product Dimensions	L: 225mm W: 235mm H: 48mm
Weight	1.3kg
Operating temperature	5℃ to 35℃ (41℉ to 95℉)
Operating humidity	5% to 90%

Note: We reserve the right to modify the design without advice!

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

CONTACT DETAILS

We trust you are completely satisfied with this product from Argos Ltd., however please feel free to contact us if you experience any difficulties, or if you would like to express your views regarding our products.

Please write to:
Customer Services
Argos Ltd
489-499 Avebury Boulevard
Saxon Gate West
Central Milton Keynes
MK9 2NW

Telephone: 0870 600 3030

Through the process of continuous improvement, Argos Ltd. reserves the right to change or alter specifications without prior notice. E&OE

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of

Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalided if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW

PDF compression, OCR, web optimization using a watermarked evaluation copy of CVISION PDFCompressor